



Quick Installation Manual
APX 5.0-30.0M-S3




Environment requirements

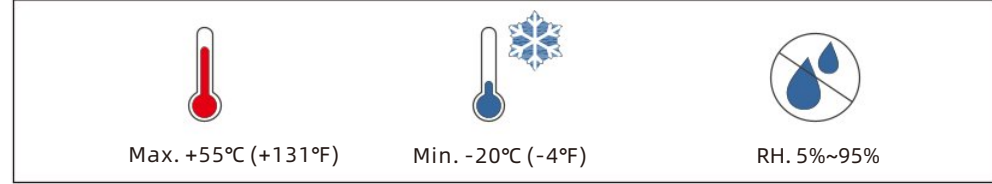

Installation tools

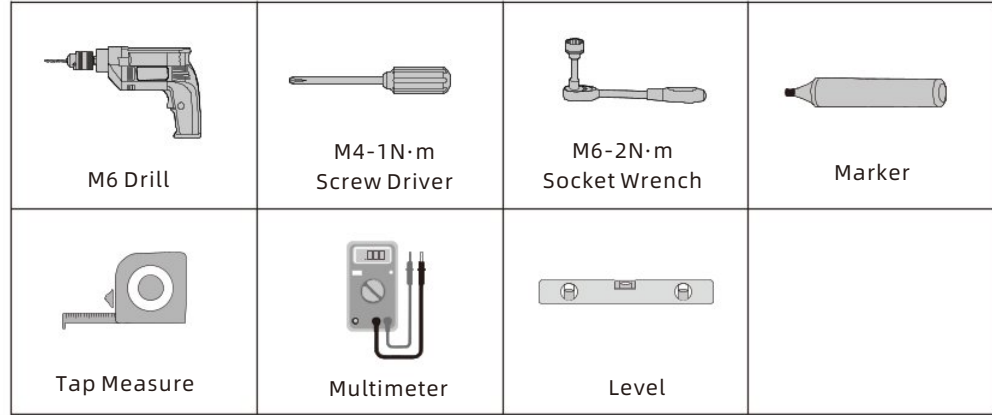

Dimensions

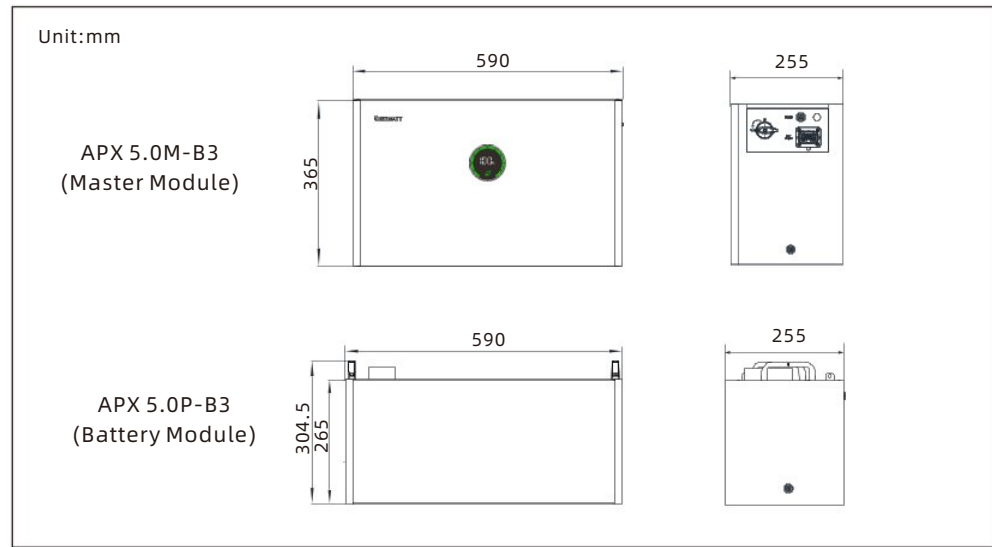

1. Inspection upon delivery

1-1 Check the packing list for the APX 5.0M-B3

APX 5.0M-B3

System cable(Length: 2000mm)

APX 5.0P-B3 Base *1

Quick Guide *1

Warranty Card *1

Marking-off template *1

Anti-tipping plate *2

M6 expansion screw *2

M4x9 stainless steel screw *5

1mm shim *4

2mm shim *4

1-2 Check the packing list for the APX 5.0P-B3

APX 5.0P-B3

Warranty card *1

M4x9 stainless steel screw *3

1-3 Check the APX 5.0-30.0M-S3 Battery System of different capacities

APX 5.0M-B3

APX 5.0P-B3 Base

APX 5.0P-B3


System cable

Wall bracket

APX M-S3 cascading communication cable

Battery System Capacity	Floor-mounted Installation Compound Mode	Wall-Mounted Installation Compound Mode
5kWh	A+C	A+C+D
10kWh	A+B+C	A+B+C+D
15kWh	A+B*2+C	A+B*2+C+D
20kWh	A+B*3+C	A+B*3+C+D
25kWh	A+B*4+C	A+B*4+C+D
30kWh	A+B*5+C	A+B*5+C+D
40kWh	A*2+B*6+C*2+E	A*2+B*6+C*2+D*2+E
50kWh	A*2+B*8+C*2+E	A*2+B*8+C*2+D*2+E
60kWh	A*2+B*10+C*2+E	A*2+B*10+C*2+D*2+E
70kWh	A*3+B*11+C*3+E*2	A*3+B*11+C*3+D*3+E*2
80kWh	A*3+B*13+C*3+E*2	A*3+B*13+C*3+D*3+E*2
90kWh	A*3+B*15+C*3+E*2	A*3+B*15+C*3+D*3+E*2

2. Installation environment requirement

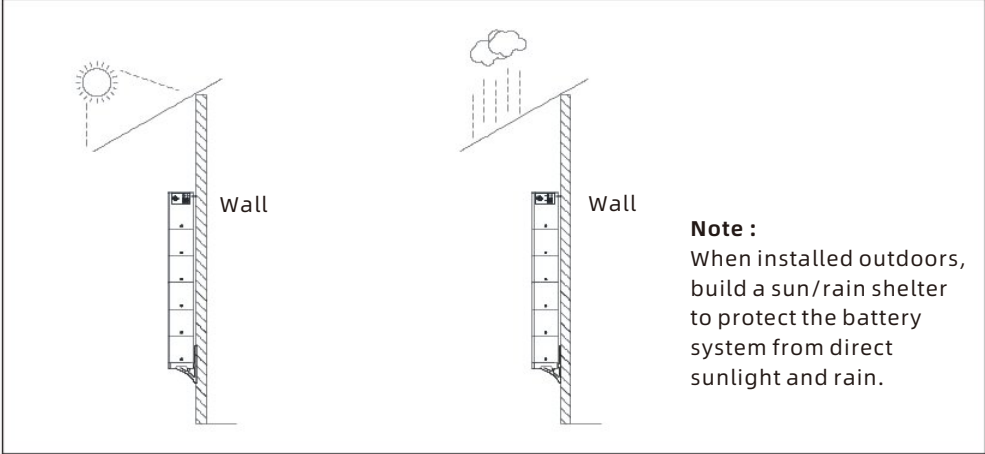


3. Floor-mounted installation

3-1 Installation location requirements

Note: For the floor-mounted installation, a single column can be configured with up to six modules (1 Master Module + 5 Battery Modules).

3-2 Preparation work before installation

➢ Before shipment, the Master Module and base are pre-installed together. If customers require additional Battery Module, the base must first be removed. Follow these steps:

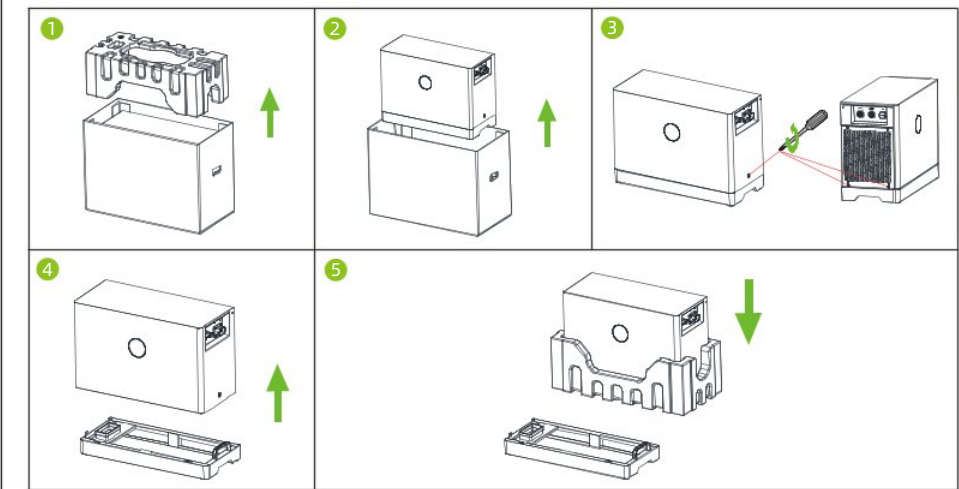

- Remove the top buffer cotton.
- Take out the Master Module + base.
- Remove the screws (3PCS) between the Master Module and the base.
- Lift the Master Module upward to separate the base from the Master Module.
- Place the top buffer cotton upside down and put the Master Module on it.

3-3 Installation procedure

Mounting hole dimensions:

Unit:mm

1 Determine the installation location.

2 Add shims beneath the base to level it according to the actual installation location requirements.

2 The Marking-off template ensures that the alignment marks are properly placed on the wall.

2 3 4 5 Fix the M6 expansion bolt into the wall.

3

1 Place the first Battery Module on the base.

2 3 Install the mounting screws securing both sides of the Battery Module to the base.

4

1 Install all Battery Modules.

2 3 Install the mounting screws on both sides of the Battery Module.

5

1 Install the Master Module at the very top position, then install the connectors on both sides of the Master Module. Finally, tighten the two screws to secure the Master Module to the wall.

2 3 Install the mounting screws on both sides of the Master Module and Battery Module.

4. Wall-mounted installation

4-1 Installation location requirements

Note: For wall-mounted installations, a single column can be configured with up to six modules (1 Master Module + 5 Battery Modules).

4-2 Installation location requirements

Unit:mm

Mounting hole dimensions:

1 install the wall bracket

2

1 Mark the hole positions. **2** Drilling eight holes. **3** Fix the bracket on the wall.

3

1 The Marking-off template ensures that the alignment marks are properly placed on the wall. **2** Fix the M6 expansion bolt into the wall.

4

1 Place the first Battery Module on the Wall bracket. **2** Install the mounting screws securing both sides of the Battery Module to the Wall bracket.

5

1 Install all Battery Modules. **2** Install the mounting screws on both sides of the Battery Module.

6

1 Install the Master Module at the very top position, then install the connectors on both sides of the Master Module. Finally, tighten the two screws to secure the Master Module to the wall. **2** Install the mounting screws on both sides of the Master Module and Battery Module.

5. Cable connection

5-1 APX 5.0M-B3 terminal&key description

No. Port Function

1	Link-in	APX M-S3 cascading communication input port
2	Link-out	APX M-S3 cascading communication output port
3	USB	USB port for inserting a USB flash drive to update the firmware
4	LED	LED status indicator, Steady green:Normal; Steady red:Fault; Permanent darkness: Hibernation
5	DC switch	Turn on/off the power connection from Master Module to inverter
6	Start button	Wake up the Battery Module (Press and hold for over 5 seconds)
7	Power and communication integrated terminal	Power and communication interfaces connected to the inverter

5-2 Battery capacity description

A single APX M-S3 system can connect 0 to 5 Battery Modules parallel to increase the capacity and power of the battery system, and it communicates with the inverter through RS485/CAN communications. At the same time, it supports the cascading of up to 3 APX M-S3 systems. One APX M-S3 system communicates with another APX M-S3 system through CAN communication.

— DC input cable — Communication cable

5-3 Communication port connection

APX 5.0-30.0M-S3	MOD-HU/MID-HU	MIN-XH2 (Rj45 version)	Communication port pinout
1 INV.EN(-)	1 BAT.EN-	1 BAT.EN-	
2 INV.EN(+)	2 BAT.EN+	2 BAT.EN+	
3 M3_CAN2_L	3 CAN.L.M3	3 \	
4 DSP_CAN2_L	4 CAN.L.DSP	4 \	
5 DSP_CAN2_H	5 CAN.H.DSP	5 \	
6 M3_CAN2_H	6 CAN.H.M3	6 \	
7 RS485_B(B)	7 485B.BAT	7 485B/CAN.L	
8 RS485_A(A)	8 485A.BAT	8 485A/CAN.H	

The communication port definition for the APX 5.0-30.0M-S3 is as follows:
Pin 1-2: Battery wake-up signal
Pin 3-6: CAN communication between the battery and the inverter
Pin 7-8: RS485 communication between the battery and the inverter
For the corresponding port definition on the inverter side, please refer to the inverter's user manual.

5-4 System wiring diagram

Note1: When connecting the communication cable, ensure the protective cover is fully tightened to maintain waterproof integrity. Water damage resulting from improper installation is not covered under the warranty.

Note2: It is strongly recommended not to install a DC circuit breaker between the battery and the inverter. If one must be installed, ensure its rated voltage exceeds 1000V and its rated current exceeds 40A. Never operate the breaker while the system is energized, as this can cause severe equipment damage.

6. Connection & disconnection of power and communication integrated terminal

Connection:

1 Insert the wire terminals into the output terminals of the Master Module. **2** Press the knob in the direction shown. **3** Use a screwdriver to push the latch in the direction shown to lock the terminal.

Disconnection:

1 Use a screwdriver to push the clip in the direction shown to unlock the terminal. **2** Press the knob in the direction shown. **3** Pull the wire terminals outward.

7. Powering on/off the battery system

Power on	1. Turn on the DC Switch 2. Press the start button for more than 5s	Rotate ON OFF Press
Power off	Turn off the DC Switch (wait for over 90s)	Rotate ON OFF

Note:
1. Before performing maintenance or inspection work, ensure that the AC circuit breaker and the DC switch of the inverter, as well as the the DC switch on the APX 5.0M-B3 are all disconnected. After powering down the system, wait for 2 minutes and confirm that the LED display light on the APX 5.0M-B3 has turned off. Do not perform any operations until the system is completely shut down.
2. When cascading multiple APX M-S3 systems, pressing the start button on any Master Module will activate the entire system.
3. This document is subject to ongoing review and revision. Growatt reserves the right to modify the content at any time without prior notice. Unless otherwise specified, this document serves solely as a quick installation guide. All information and suggestions in this document do not constitute a warranty of any kind, express or implied. Growatt reserves all rights for final interpretation.

8. Service and contact

Shenzhen Growatt New Energy Co., Ltd.
4-13/F, Building A, Sino-German (Europe) Industrial Park, Hangcheng Blvd, Bao'an District, Shenzhen, China
E service@growatt.com
W en.growatt.com

For local customer support, please visit <https://en.growatt.com/support/contact>

Download Manual

Growatt New Energy

GR-UM-529-A-00 (PN: 044.0155100)